



TOOLS NEEDED

1. Wire stripper
2. Electrical tape
3. 12V test light
4. Power drill with Phillips head bit

PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION. IF YOU DO NOT CLEARLY UNDERSTAND ANY PART OF INSTALLATION INSTRUCTIONS, DO NOT ATTEMPT TO INSTALL YOURSELF. HAVE A QUALIFIED PROFESSIONAL PERFORM INSTALLATION.

RBP ASSUMES NO LIABILITY FOR ANY DAMAGE CAUSED BY IMPROPER USE AND/OR INSTALLATION OF ITS PRODUCTS.

IMPORTANT

1. Check the vehicle owner's manual and local city/state traffic regulations to see if there are any restrictions on the use of auxiliary lights.
2. DO NOT install the lights on the front bumper if your vehicle has air bag sensors behind the front bumper (doing so may damage the sensor and/or deploy the air bag). If you are not sure check the your vehicle service manual to see where the sensors are located.
3. The lamp will become extremely hot during operation. Take extra care in avoiding any contact during or after operation. DO NOT touch or wash lights for at least 10 minutes after use.

IMPORTANT

4. When installing lights, take special care not to drill into fluid or electrical lines.
5. If drilling a hole to run wires, use a rubber grommet (sold separately) on drilled hole to prevent wire damage.

LIGHT INSTALLATION


1. Select a mounting location that will not cause any obstruction of your vehicle's normal operation.
2. Select the appropriate rubber spacer (flat or curved) depending on the type of surface to which you are mounting.
3. Run cable from light through the rubber spacer.
4. Use power drill with Phillips head bit to drill the self-tapping screws into place. Screws should go thru both the light and rubber spacer. Do not over tighten screws.
5. Follow wiring instructions on next page.

WIRING INSTRUCTIONS

1. Use a 12V test light to find the proper (+12V) power wire source.
2. Connect power source wires to power source.
3. Follow diagram below for wiring installation.

SWITCHED POWER SOURCE

Connect power leads to a switched power source. Power source must be a fused connection. Do not connect directly to vehicle battery.

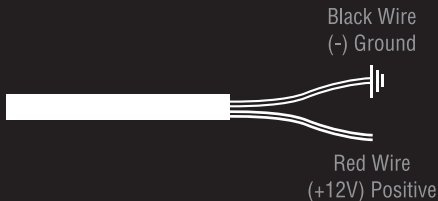




WIRING INSTRUCTIONS

CONNECT WITH SWITCH

Connect power leads to a switch (not included). Switch must be connected to a fused power source.

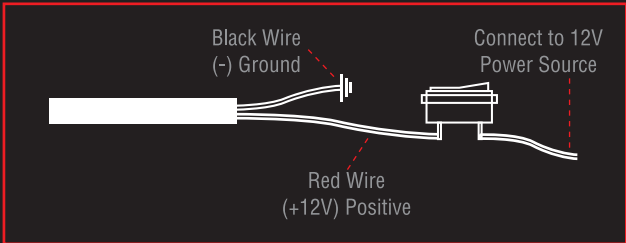

RBP-9700W